

	4x8 HDMI Switch
Address code	EA00H
1 (ch1)	E51Ah
2 (ch2)	FE01h
3 (ch3)	E3ECh
4 (ch4)	FC03h
On	E2Edh
Off	FD02h
Select	FB04h

	2x1 HDMI Switch
Address code	FF00
1 (ch1)	FA05
2 (ch2)	E619

	3x1 HDMI Switch
Customer code	00FF
1 (ch1)	0F
2 (ch2)	1C
3 (ch3)	18

	4x1 HDMI Switch
Customer code	01H EAH
1 (ch1)	1A
2 (ch2)	01
3 (ch3)	1C
4 (ch4)	03
On	1D
Off	1D
Select	02

	4x2 HDMI Switch
Customer code	01H EAH
1 (ch1)	1A
2 (ch2)	01
3 (ch3)	1C
4 (ch4)	03
On	1D
Off	02
Select	04

UltraAV 4x4 Matrix Control Codes (Remote 1)

Item	Command	Description
1	SWC <input type="checkbox"/> 1 <input type="checkbox"/> A	Switch output channel 1 to input channel A
2	SWC <input type="checkbox"/> 1 <input type="checkbox"/> B	Switch output channel 1 to input channel B
3	SWC <input type="checkbox"/> 1 <input type="checkbox"/> C	Switch output channel 1 to input channel C
4	SWC <input type="checkbox"/> 1 <input type="checkbox"/> D	Switch output channel 1 to input channel D
5	SWC <input type="checkbox"/> 2 <input type="checkbox"/> A	Switch output channel 2 to input channel A
6	SWC <input type="checkbox"/> 2 <input type="checkbox"/> B	Switch output channel 2 to input channel B
7	SWC <input type="checkbox"/> 2 <input type="checkbox"/> C	Switch output channel 2 to input channel C
8	SWC <input type="checkbox"/> 2 <input type="checkbox"/> D	Switch output channel 2 to input channel D
9	SWC <input type="checkbox"/> 3 <input type="checkbox"/> A	Switch output channel 3 to input channel A
10	SWC <input type="checkbox"/> 3 <input type="checkbox"/> B	Switch output channel 3 to input channel B
11	SWC <input type="checkbox"/> 3 <input type="checkbox"/> C	Switch output channel 3 to input channel C
12	SWC <input type="checkbox"/> 3 <input type="checkbox"/> D	Switch output channel 3 to input channel D
13	SWC <input type="checkbox"/> 4 <input type="checkbox"/> A	Switch output channel 4 to input channel A
14	SWC <input type="checkbox"/> 4 <input type="checkbox"/> B	Switch output channel 4 to input channel B
15	SWC <input type="checkbox"/> 4 <input type="checkbox"/> C	Switch output channel 4 to input channel C
16	SWC <input type="checkbox"/> 4 <input type="checkbox"/> D	Switch output channel 4 to input channel D
17	PWR <input type="checkbox"/> 1	System Power ON
18	PWR <input type="checkbox"/> 0	System Standby
19	RST	System Reset. All channels go back to channel A

Box = Space