

READ ME FIRST – SETUP INSTRUCTIONS


Congratulations on your purchase of the UltraAV™ HDMI 1-2 Audio/Video Splitter. This HDMI splitter is designed to provide exceptional performance and value. It allows access to 2 HDMI display devices from a single HDMI video source. For use with a DVI device, use an optional HDMI to DVI adapter or HDMI to DVI cable.

Features:

- Supported Resolutions: 480i, 480p, 720p, 720i, and 1080i, 1080p (1920 x 1200 computer resolution)
- Supports HDCP compliant devices
- HDMI 1.2a multi-channel audio and HD video support

Includes:

- HDMI 1-2 splitter
- Power adapter
- Setup instructions

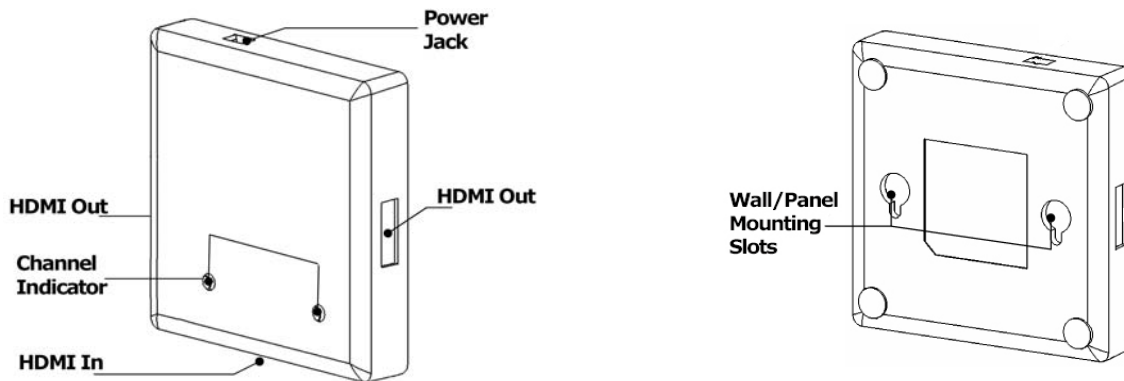

Mounting the HDMI Splitter:

As an alternative to placing the 1-2 Splitter flat on its foot pads, the HDMI splitter features 2 wall mounting slots located on the back of the switch. The switch can easily be mounted to a wall or panel.

How to Connect the HDMI Splitter:

Step 1: Plug the power adapter into the “Power Jack” on the splitter. Plug the adapter into a power outlet.

Step 2: Connect your HDMI cable from the video source into the HDMI splitter input labeled “In”.

Step 3: Connect your HDMI cables from each of the two displays into the splitter outputs labeled “Out”.

Channel Indicator:

A channel indicator LED becomes illuminated when the video display, which is connected to its corresponding HDMI port, is properly connected to it by an HDMI cable and is powered on. The LED will also illuminate when the display is in power saving mode.

Troubleshooting:

-If the HDMI splitter fails to operate,

1. Ensure the HDMI source and the displays (or projector) are powered on.
2. Check both ends of all of the HDMI cables to ensure that they are fully inserted into each device.
3. Inspect the power adapter to ensure it is plugged into the power jack of the splitter. Ensure the power adapter is plugged into the power outlet and the power outlet is supplying power.

Assistance: If you have questions regarding the Accell HDMI switch, please check out our Web site at: www.accellcables.com. Technical Support can be reached at 510-438-9288 (M-F 9am-5pm PST).

Due to ongoing improvements, Accell reserves the right to make changes to hardware, packaging and any accompanying documentation without prior written notice. The information above is believed to be accurate, however Accell assumes no responsibility for any inaccuracies and liability for direct, indirect, special, incidental, or consequential damages as a result. UltraAV is a trademark of Accell Corporation. For warranty information please check out our Web site or contact Technical Support at the phone number above.